



Model  
32AER05

# QUICK-START GUIDE

Enjoy your new TV sooner using this simple guide.

## LED TV

### PARTS LIST

In the box you will find:  
1 x LED TV  
1 x Remote Control  
1 x Stand (screws are included)  
1 x Instruction Manual

### WHAT YOU WILL NEED

 
Screwdriver (for stand installation)  
Antenna cable



### ASSEMBLE TV BASE

1. Lay TV on a flat & clean surface, with TV screen face down
2. Attach neck to the TV with supplied screws
3. Attach base to the neck with supplied screws

TV + Stand (Bottom View)

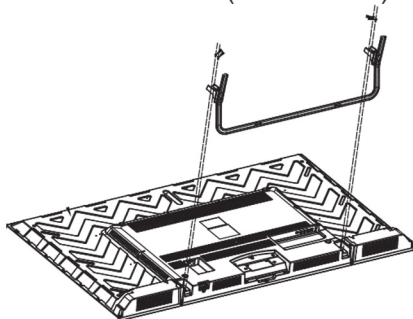

### CONNECTIONS

Antenna Input  
HDMI (Best Quality)  
PC VGA Input  
Earphone Output  
AV Input (Standard Quality)  
PC Audio Input  
Coaxial Digital Audio Output  
USB input

 
	<b>AV Input</b> External AV Signal Input and Reverse Right/Left Sound Channel		<b>EARPHONE output</b> When earphones are plugged in, speakers are disabled
	<b>VGA Input</b> PC analog signal input		<b>USB Input</b>
	<b>HDMI Input</b> Digital signal input from HDMI video connector		<b>COAXIAL</b> Connect the SPDIF receiver.
	<b>ANT TS</b> Connect the antenna/cable tv input (75Ω/HF/LF)		<b>PC AUDIO INPUT</b> VGA input and audio input when VGA input

### FIRST TIME SETUP

1. Connect antenna cable to TV "ANT" Port
2. Connect power cord to TV and wall socket
3. Insert batteries to remote and press to turn on TV.

### SETUP WIZARD

1. TV will enter SETUP WIZARD (or press MENU on remote, select SETUP > SETUP WIZARD)
2. Follow the on-screen steps to setup language, time and channel scan

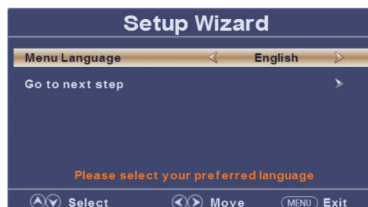




Model  
32AER05

# QUICK-START GUIDE

 Enjoy your new TV sooner using this simple guide.

LED TV

## Remote Controller

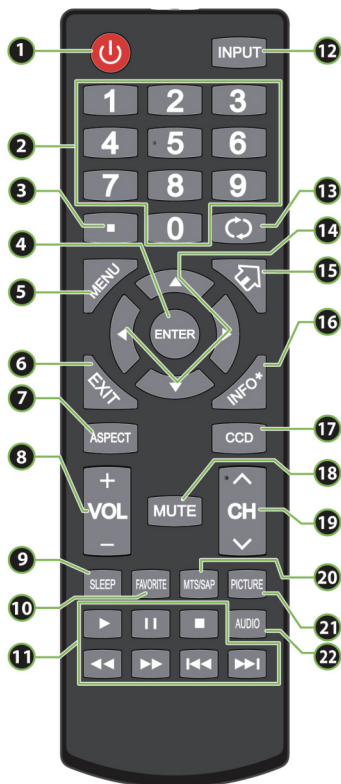

#	Button	Description
1	(power)	Press to turn your TV on or off (standby mode).
2	Numbers	Press to enter channel numbers and the parental control password.
3	●	Press to enter a digital sub-channel number.
4	ENTER	Press to confirm selections or changes.
5	MENU	Press to open the on-screen menu.

#	Button	Description
6	EXIT	Press to close the on-screen menu.
7	ASPECT	Press to change how the picture looks on the screen (aspect ratio).
8	VOL+/-	Press to increase or decrease the volume.
9	SLEEP	Press to set the sleep timer.
10	FAVORITE	Press to open the <i>Favorite</i> <ul style="list-style-type: none"><li>▶ Press to start the photo playback.</li><li>⏸ Press to pause the photo playback.</li><li>▶ Press to stop the photo playback.</li><li>◀ Press to play backward faster.</li><li>▶ Press to play forward faster.</li><li>◀ Press to view the previous photo.</li><li>▶ Press to view the next photo.</li></ul>
11	USB Operation	
12	INPUT	Press to open the <i>INPUT SOURCE</i> list, press ◀ or ▶ on the remote control to select the video input source, then press ENTER
13	(return)	In TV mode, press to return to the previous channel.
14	▲ ▼ ▶	Press to navigate in on-screen menus and to adjust settings.
15	🏠 (home)	Press to open the ROKU menu. (Not available)
16	INFO*	Press to display TV status information, such as the channel number, channel name (if available), or signal
17	CCD	Press to turn closed captioning on or off. You can select <b>CC Off</b> , <b>CC On</b> , or <b>CC On When Mute</b>
18	MUTE	Press to mute the sound. Press again to restore the sound.
19	CH ▲/CH ▼	Press to change TV channels.
20	MTS/SAP	Press to select the audio mode for an analog program. You can select: <ul style="list-style-type: none"><li>• <b>Mono</b>—Select this option if there is noise or static on weak stereo broadcasts.</li><li>• <b>Stereo</b>—Select this option for programs broadcast in stereo.</li><li>• <b>SAP</b>—Select this option to listen to a secondary audio program, if available.</li></ul>
21	PICTURE	Press to select the picture mode.
22	AUDIO	Press to select the sound mode.