Model
50AER05

QUICK-START GUIDE

Enjoy your new TV sooner using this simple guide.

LED TV

PARTS LIST

1

In the box you will find:
1 x LED TV
1 x Remote Control
1 x Stand (screws are included)
1 x Instruction Manual

WHAT YOU WILL NEED

Screwdriver (for stand installation)
Antenna cable

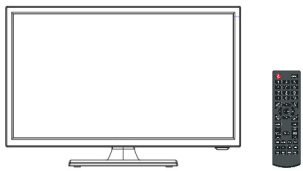

CONNECTIONS

2

Antenna Input
HDMI (Best Quality)
PC VGA Input
Earphone Output
Components Video Input (Better Quality)
AV Input (Standard Quality)
PC Audio Input
Coaxial Digital Audio Output
USB input

INPUT	**AV Input** External AV Signal Input and Relevant Right/Left Sound Channel	EARPHONE	**EARPHONE output** When earphones are plugged in, speakers are disabled
VGA	**VGA Input** PC analog signal input	USB	**USB input**
INPUT	**Y Pb Pr Input** Connect to the composite terminal of your DVD/VCR (Some models without this interface)	COAXIAL	**COAXIAL** Connect the SPDIF receiver.
HDMI	**HDMI Input** Digital signal input from HDMI video connector.	PC AUDIO IN	**PC AUDIO INPUT** VGA input and audio input when VGA input
ANT 75Ω	**ANT 75** Connect the antennal/cadle tv input (75VHF/UHF)		

ASSEMBLE TV BASE

3

1. Lay TV on a flat & clean surface, with TV screen face down
2. Attach neck to the TV with supplied screws
3. Attach base to the neck with supplied screws

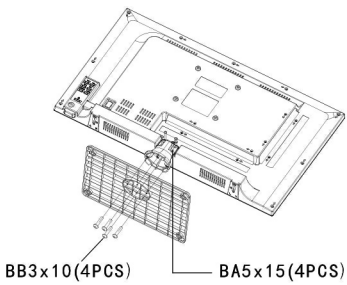

FIRST TIME SETUP

4

1. Connect antenna cable to TV "ANT" Port
2. Connect power cord to TV and wall socket
3. Insert batteries to remote and press ⏻ to turn on TV.

SETUP WIZARD

1. TV will enter SETUP WIZARD (or press MENU on remote, select SETUP > SETUP WIZARD)
2. Follow the on-screen steps to setup language, time and channel scan

Model
50AER05

QUICK-START GUIDE

Enjoy your new TV sooner using this simple guide.

LED TV

Remote Controller

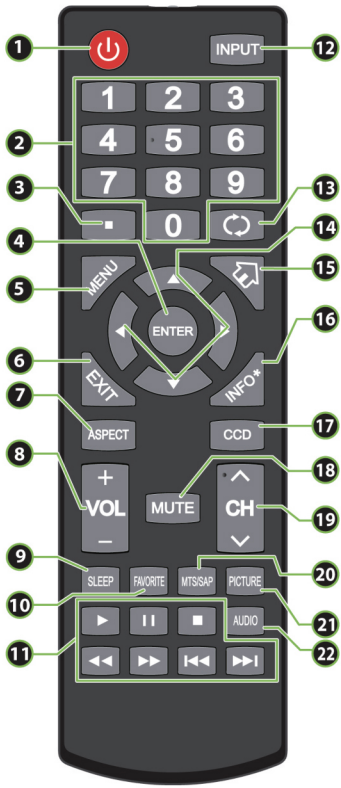

#	Button	Description
1	⏻ (power)	Press to turn your TV on or off (standby mode).
2	Numbers	Press to enter channel numbers and the parental control password.
3	●	Press to enter a digital sub-channel number.
4	ENTER	Press to confirm selections or changes.
5	MENU	Press to open the on-screen menu.

#	Button	Description
6	EXIT	Press to close the on-screen menu.
7	ASPECT	Press to change how the picture looks on the screen (aspect ratio).
8	VOL+/–	Press to increase or decrease the volume.
9	SLEEP	Press to set the sleep timer.
10	FAVORITE	Press to open the *Favorite*
11	USB Operation	▶ Press to start the photo playback. ❚❚ Press to pause the photo playback. ■ **Press to stop the photo playback.** ◀◀ Press to play backward faster. ▶▶ Press to play forward faster. ⏮ Press to view the previous photo. ⏭ Press to view the next photo.
12	INPUT	Press to open the *INPUT SOURCE* list, press ◀ or ▶ on the remote control to select the video input source, then press **ENTER**
13	(return)	In TV mode, press to return to the previous channel.
14	▲▼◀▶	Press to navigate in on-screen menus and to adjust settings.
15	(home)	Press to open the ROKU menu. (Not available)
16	INFO*	Press to display TV status information, such as the channel number, channel name (if available), or signal
17	CCD	Press to turn closed captioning on or off. You can select **CC Off**, **CC On**, or **CC On When Mute**
18	MUTE	Press to mute the sound. Press again to restore the sound.
19	CH ∧/CH ∨	Press to change TV channels.
20	MTS/SAP	Press to select the audio mode for an analog program. You can select: • **Mono**—Select this option if there is noise or static on weak stereo broadcasts. • **Stereo**—Select this option for programs broadcast in stereo. • **SAP**—Select this option to listen to a secondary audio program, if available.
21	PICTURE	**Press to select the picture mode.**
22	AUDIO	Press to select the sound mode.